



[ナレッジベース](#) > [easYgen-3000XT](#) > [How I can connect easYgen with LSG to third party load share lines ?](#)

How I can connect easYgen with LSG to third party load share lines ?

Clemens - 2024-09-27 - [easYgen-3000XT](#)

all easYgen-2000, 3000 and 3000XT can be connected to third party load share lines via LSG Loadshare gateway

For legacy CAN and Modbus Loadsharelines only one LSG is required for kW and kVAr sharing.

If you want to connect to analog loadshare lines , one LSG is required for kW load sharinig and a second LSG for kVAr sharing isrequired.

