



[ナレッジベース](#) > [LS-6XT](#) > [How to use a WAGO DI/DO with LS-6XT?](#)

## How to use a WAGO DI/DO with LS-6XT?

Simon - 2024-10-04 - [LS-6XT](#)

The LS-6XT software version 2.14 in difference to the easYgen3000XT doesn't support DI/DOs from WAGO, which you may need to comply to marine certifications like LR.

The WAGO - IOs will need to get configured. The easiest way to auto-configure WAGO - IOs is with the easYgen-3000XT auto-configuration. Please find attached a detailed description of this procedure.

添付

- [LS-6XT\\_IO\\_card\\_extension02.docx \(71.14 KB\)](#)