



[ナレッジベース](#) > [easYgen-3000XT](#) > [How to write active power \(kW\) setpoint through Modbus](#)

# How to write active power (kW) setpoint through Modbus

Özgür Tosun - 2024-09-27 - [easYgen-3000XT](#)

## How to write active power (kW) setpoint through Modbus?

Example with Setpoint of 500 kW:

kW Remote Setpoint Address = 507

(This example shows the handling of the active power setpoint with PC software "ModScan32".)

1) Select the function, i.e. FC16



2) Number of Points.... -> O.K.



3) Enter the desired value.



4) Click Update.