



[Knowledgebase](#) > [Power Management](#) > [LS-5](#) > [Can a 2 breaker LS-5x2 accept incoming load between the 2 LS-5x2 breakers?](#)

Can a 2 breaker LS-5x2 accept incoming load between the 2 LS-5x2 breakers?

Justin Schneider - 2026-07-27 - [LS-5](#)

LS-5x2 control only accepts outgoing load between the two LS-5x2 breaker.

Incoming load between the two breakers of LS5x2 is not supported