



[Knowledgebase](#) > [Power Management](#) > [easYgen-3000XT](#) > [How I can access easYgen-3000XT configuration mode? what is Password for Codelevel?](#)

How I can access easYgen-3000XT configuration mode? what is Password for Codelevel?

Justin Schneider - 2026-07-27 - [easYgen-3000XT](#)

The password will only work if original installer not changed below password to another new password.

Code Level	User Account Entry		Basic Code Entry	Comment
	User Name (fix)	Password (default)	Password (default)	
1	CL01	CL0001	1	The Basic Level Access to a limited number of parameters and configurations. The own code level can be indicated and configured.
3	CL03	CL0003	3	The Commissioning Level Access to well defined parameters and configurations, which are usually needed on a commissioning level. The own code level and the levels below can be indicated and configured.
5	CL05	CL0500	500	The Super Commissioning Level Access to nearly all parameters and configurations, except calibration and super user items. The firmware updating is released. The own code level and the levels below can be indicated and configured.