

[Knowledgebase](#) > [Power Management](#) > [easYgen-3000](#) > [How I can connect easYgen with LSG to third party load share lines ?](#)

How I can connect easYgen with LSG to third party load share lines ?


Justin Schneider - 2026-07-27 - [easYgen-3000](#)

all easYgen-2000, 3000 and 3000XT can be connected to third party load share lines via LSG Loadshare gateway

For legacy CAN and Modbus Loadsharelines only one LSG is required for kW and kVAr sharing.

If you want to connect to analog loadshare lines , one LSG is required for kW load sharing and a second LSG for kVAr sharing is required.

LSG Load Share Gateway

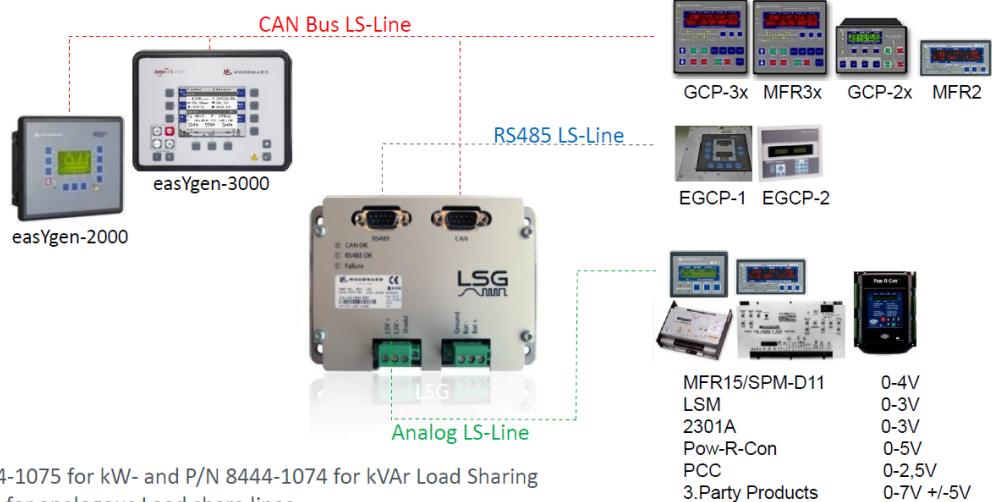

P/N 8444-1075 for kW- and P/N 8444-1074 for kVAr Load Sharing required for analogous Load share lines.
RS485 & CAN Lines only require one LSG for kW & kVAr sharing.