



[Knowledgebase](#) > [Power Management](#) > [easYgen-3000XT](#) > [How to write active power \(kW\) setpoint through Modbus](#)

How to write active power (kW) setpoint through Modbus

Justin Schneider - 2026-07-27 - [easYgen-3000XT](#)

How to write active power (kW) setpoint through Modbus?

Example with Setpoint of 500 kW:

kW Remote Setpoint Address = 507

(This example shows the handling of the active power setpoint with PC software "ModScan32".)

- 1) Select the function, i.e. FC16



- 2) Number of Points.... -> O.K.



- 3) Enter the desired value.



- 4) Click Update.