



[ナレッジベース](#) > [Electronic Controls](#) > [How to Change Control IP Address](#)

# How to Change Control IP Address

Nicole Chittum (Turbine) - 2024-09-27 - [Electronic Controls](#)

The IP address of a control's Ethernet ports can be changed using AppManager. You can see the current IP address of the Ethernet ports of a control by retrieving the Control Properties in AppManager. AppManager is a Woodward service tool that allows users to access control systems to manage files and control applications.

## Step 1

Open AppManager. Select the control you want to update and go to Control > Change Network Settings. No application can be running on the CPU.



*Figure 1: Control > change network settings.*

## Step 2

Select which Ethernet port you want to update in the top right corner.



*Figure 2: Ethernet port selection.*

## Step 3

Select "Specify a new IP address" and fill in the IP address and subnet and gateway you want to use. Ethernet 1 and Ethernet 2 must be on different networks.



*Figure 3: Specify new IP address.*

#### **Step 4**

Select "OK" and follow prompts. Control will be rebooted for changes to take effect.



*Figure 3: Select OK.*