



[ナレッジベース](#) > [Power Management](#) > [LS-6XT](#) > [How to use a WAGO DI/DO with LS-6XT?](#)

How to use a WAGO DI/DO with LS-6XT?

Justin Schneider - 2026-07-27 - [LS-6XT](#)

The LS-6XT software version 2.14 in difference to the easYgen3000XT doesn't support DI/DOs from WAGO, which you may need to comply to marine certifications like LR.

The WAGO - IOs will need to get configured. The easiest way to auto-configure WAGO - IOs is with the easYgen-3000XT auto-configuration. Please find attached a detailed description of this procedure.