



[ナレッジベース](#) > [Power Management](#) > [LS-5](#) > [Mssing member {4063} LS5 V2 not recognizing](#)

Mssing member {4063} LS5 V2 not recognizing

Justin Schneider - 2026-07-27 - [LS-5](#)

What you can check is...

- Is the monitoring activated in all LS units?



- Is the number of LS5 communicating configured correctly in all units?



- How many units are shown in the multi unit screen?